













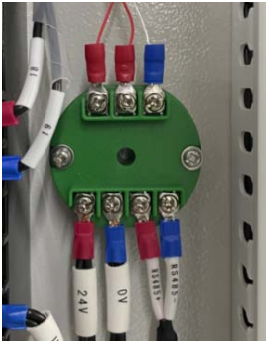
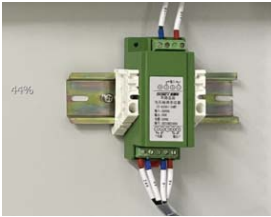


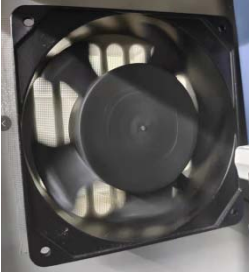



## List of optional spare parts for the charger

NO.	Repairpartslineitem	Picture	Notes
1	HMI		
2	Digital trigger board		
3	Fuse		
4	Thyristor		
5	Fan		

6	Breaker		
7	KM		
8	Ac overvoltage/undervoltage relay		
9	Voltmeter/ ammeter (Mechanic)		
10	Voltmeter/ ammeter (Digital)		
11	DC overvoltage / undervoltage relay		
12	Insulation monitoring relay		
13	Output filter capacitance		

14	I/O acquisition module		
15	Temperature sensor PT100		
16	Voltage sensor		
17	Relay		
18	Indicator lamp		
19	Knob switch (3 gears)		
20	Knob switch (2 gears)		
21	Button Switch	